

CVAD Securement devices are used to stabilize and prevent CVAD dislodgement. The CVAD dressing change procedure with Clik-Fix® will vary depending on when the securement device needs to be applied.


This resource will review the application of Clik-Fix® for a CVAD with a *long external length*.

CVADs that have a long external length **need to be looped** under the dressing. Select the appropriately sized IV Advanced Tegaderm™ dressing*. Remember to select the appropriately sized Clik-Fix® based on the French size of the CVAD.




*Use an alternate dressing when indicated.

Place the **main dressing** with a loop or J in the CVAD, covering the insertion site.

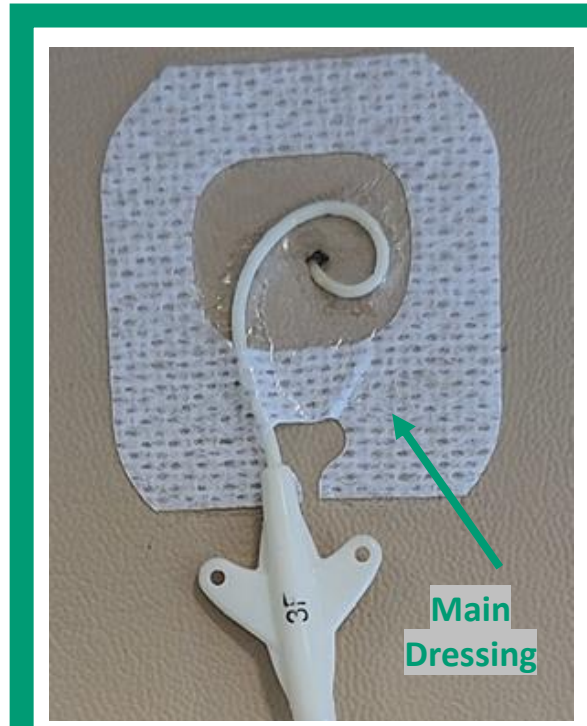

Secure the CVAD wings using the universal **chevron method** of the Clik-Fix® and place on the skin.

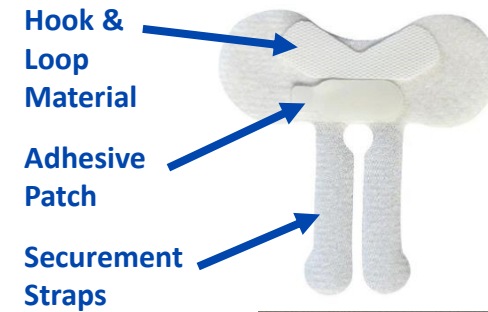

There is no need to secure the wings into posts. Ensure securement straps are pointing towards the insertion site once secured.



Complete the dressing change by using the additional dressing tapes to **cover the Clik-Fix® and any gaps** between the main dressing and the Clik-Fix®.

This will keep the securement straps in place and keep the Clik-Fix® clean.

