

CVAD Securement devices are used to stabilize and prevent CVAD dislodgement. The CVAD dressing change procedure with Clik-Fix® will vary depending on when the securement device needs to be applied.


This resource will review the application of Clik-Fix® for a CVAD with a *short external length*.

CVADs that have a short external length **cannot be looped** under the dressing. Select the appropriately sized IV Advanced Tegaderm™ dressing\*. Remember to select the appropriately sized Clik-Fix® based on the French size of the CVAD.




\*Use an alternate dressing when indicated.


Secure the CVAD wings using the universal **chevron method** of the Clik-Fix® and place on the skin.

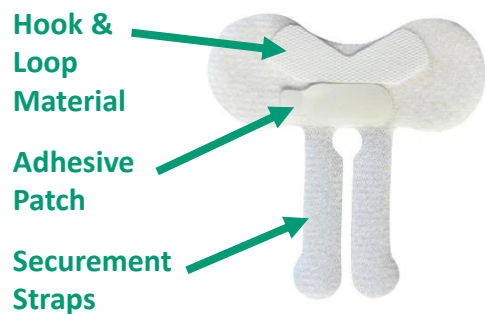

There is no need to secure the wings into posts. Ensure securement straps are pointing towards the insertion site once secured.

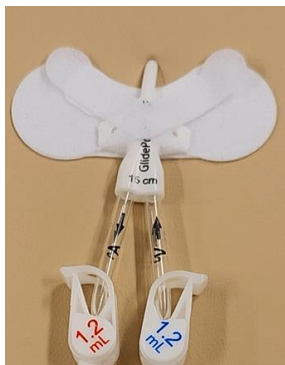

Place the **main dressing**, covering the insertion site and all or part of the Clik-Fix®.

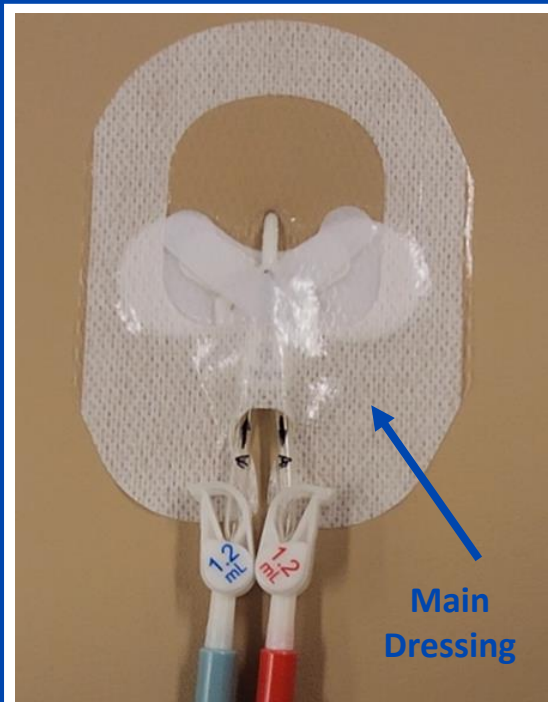

Complete the dressing change by using the additional dressing tapes to **cover any remaining exposed areas of the Clik-Fix® and any gaps in the dressing.**

This will keep the securement straps in place and keep the Clik-Fix® clean.

